

System Connection Diagram

CONNECTIONS FOR JMM AUDIO MIKRO8 RACK SYSTEM

- 1 MIKRO8 AMPLIFIER OUTPUTS ARE SPEAKON CONNECTORS AND USE +1 -1 AND +2 -2 ON EACH output channel.
(there are 4 phisical output channels on amplifier rear panel which supplies 2 speaker output channels each.
- 2 With this wiring configuration the Mikro Rack 8 channels can be controlled individually by the JMM Ipad App wirelessly
download the software from the itunes store JMM-DSP428W below.
Technician software: will have full access to all operations of the MIKRO Rack system.
Client software: will only control Volumes and Mute.

Volumes can still be controlled manually at all operational times from MIKRO8 volume knobs except when in mute mode on DSP428W.

- 3 Mikro8 Rack can also be controlled remotely via USB cable connection on front panel USB input. connect any laptop running windows

For Technician:
<https://itunes.apple.com/hk/app/jmm-dsp428w/id1223330432?mt=8>

For Client:
<https://itunes.apple.com/hk/app/jmm-dsp428w-client/id1258427177?mt=8>

